Quick guide for using the TrekStor **MusicStick** 120

Thank you for buying the TrekStor **MusicStick** 120. We are confident that this product will be the source of much enjoyment.

Note: Detailed instructions for using the MusicStick 120 can be found on the Internet support page under http://www.trekstor.de .

Windows 98 users can get the driver required for the device from the Internet support page at http://www.trekstor.de .

• Controls for the TrekStor **MusicStick** 120

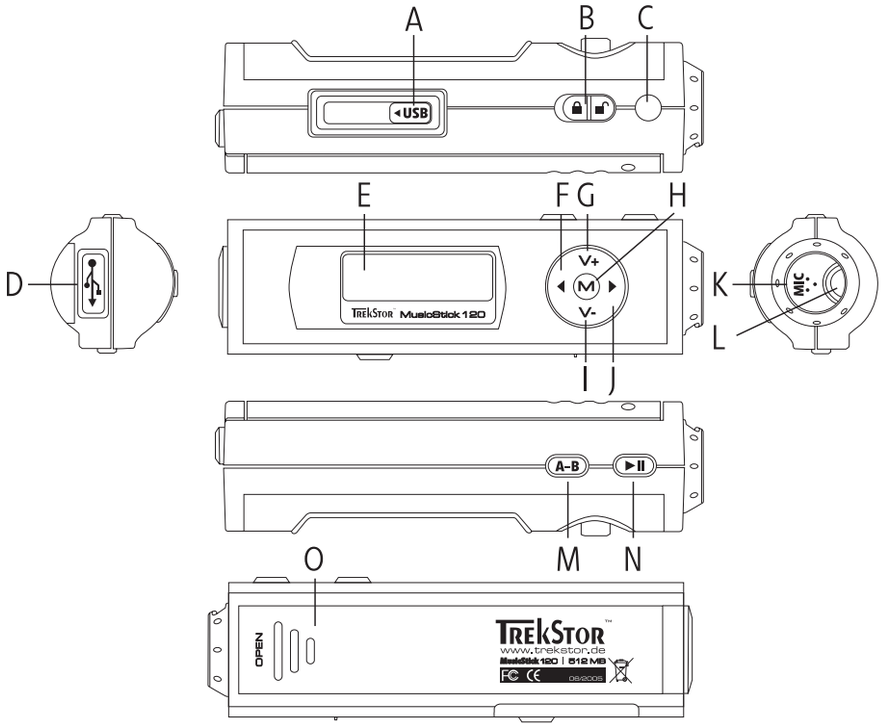

A USB port switch (◂USB)
B "Hold" switch
C Earphone jack
D USB port
E LC display
F Rewind (◂)
G Volume (V+)
H "Jog-Key" (M)
I Volume (V-)
J Fast forward (▸)
K Microphone
L Neckband holder
M Record (A-B)
N Play/Pause (▸II)
O Battery compartment

• Connecting the TrekStor **MusicStick** 120 to a PC

Note for users of Windows 98: First download the driver from our homepage at http://www.trekstor.de . Then install the driver before connecting the **MusicStick** 120 *to your PC.*

Connect the **MusicStick** 120 to a USB port in your PC. Your operating system will immediately recognize the **MusicStick** 120 and will add a "Device with Removable Storage" under "My Computer".

• Exchanging data with the TrekStor **MusicStick** 120

1) Select the desired files (i.e. MP3, WMA, WAV) with your mouse. Copy these files by clicking them with your right mouse button and then selecting "Copy".
2) Under "My Computer", select the removable disk "TrekStor MusicStick 120".
3) Click it with your right mouse button, and select "Paste" to start copying.
   After copying is over, the data will be available on the **MusicStick** 120.

• Logging off and unplugging the TrekStor **MusicStick** 120 from the PC

Windows 98 (SE): Look for the **MusicStick** 120 under "Device Manager" (under "Drives"), and click the device with the left mouse button. Select the menu item "Remove". You can now disconnect the **MusicStick** 120 from the PC.

Windows 2000/ME/XP: At the bottom right on the task bar, click your right mouse button on the symbol "Safely remove hardware". In the context menu that appears, click the left mouse button on "Safely Remove Mass Storage Device - Drive" to select it. You can now disconnect the **MusicStick** 120 from the PC.

Note: Please follow the recommended logoff procedure to prevent damage to the device or data loss.

• Using the TrekStor **MusicStick** 120

• Turning the device on and off

Turn on the **MusicStick** 120 by pressing the ⏯ button for one second. To turn off the **MusicStick** 120, press the ⏯ button for two seconds.

Note: Make sure that the "Hold" switch 🔒 is in the correct position, i.e., that the key lock is turned off. If the button lock is activated, the button lock symbol or a corresponding message will appear.

• Different modes

The **MusicStick** 120 has different modes (Music, Voice, Folder, Settings). To go to a mode, hold the "Jog Key" button for approximately one second. Push the "Jog Key" to the right ▶ or left ◀ to select the desired mode, and confirm by pressing the "Jog Key" again.

Modus: Music

Switch to "Music" mode.

• Playback

Briefly press the ⏯ button to start the playback of an audio file.

• Pause

Briefly press the ⏯ button to stop playback. Repress the ⏯ button to continue playback.

• Stop

Press the ⏯ button for approximately one second to stop playback.

• Change song

Briefly press the "Jog-Key" to the right ▶ or left ◀ to change the current song. Press the "Jog-Key" to the right ▶ to select the next song. Press the "Jog-Key" to the left ◀ to the left to switch to the previous song.

• Fast-forward/Rewind within a song

You can navigate within a song by holding down the "Jog-Key" in one direction or the other. Press the "Jog-Key" to the right ▶ to fast-forward. Press the "Jog-Key" to the left ◀ to rewind.

Note: The longer you hold the "Jog-Key" in one direction, the faster the device will go forward or rewind.

• Increase/Decrease volume

You can easily increase the volume by briefly pressing the V+ button, or decrease it by pressing the V- button.

Note: The longer you hold the "Jog-Key" in one direction, the faster the volume will increase or decrease.

Modus: Voice recording

Switch to "Voice" mode.

• Voice recording

You can record your voice using the integrated microphone. Hold the A-B button for approximately 2 seconds to start recording. Stop recording by briefly pressing the A-B button.

Note: All voice recordings are saved in the 'VOICE' folder.

Modus: Folder Navigation

Switch to "Folder" mode.

• Navigation

Press the "Jog-Key" button to the right ◄ or left ► to select the next or prior file, and confirm your selection by pressing the ►II button. To go to a subdirectory (subfolder), briefly press the "Jog-Key". Continue navigation as usual. To return to the main directory, briefly press the "Jog-Key" when a file is displayed or press the ►II button when a folder is displayed.

Note: Arrows are shown on the left in the display to help orient you while navigating. When you reach the first file of a directory, a line appears above the arrows; when you reach the last file of a directory, a line appears below the arrows.

Modus: Settings
Switch to the "Settings" mode.

Here you can set the length of illumination, contrast, different options for automatically shutting off, and the language of the **MusicStick** 120. In addition, you can display the entire memory and free memory.

• Additional functions
The **MusicStick** 120 also has other functions (Equalizer, Preview, Repeat and Delete) that you can access by briefly pressing the "Jog-Key". Press the "Jog-Key" to the right ▶ or left ◀ to select the desired setting, and confirm by pressing the "Jog-Key" again.

The manufacturer retains the right to continuously improve the product. These changes may be made without being directly described in these brief instructions. For this reason, the information provided in these brief instructions may not reflect the current state of the art.

The manufacturer only guarantees suitability for the product's intended purpose. In addition, the manufacturer is not responsible for damages or loss of data and subsequent consequences.

Copyright © 2004 TrekStor. All rights reserved. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Support

	Hotline	E-Mail	Language
AT	+49 431 - 24 89 45 70**	support.at@trekstor.de	German
BE	+49 431 - 24 89 45 80**	support.en@trekstor.de	English
CH	+49 431 - 24 89 45 73**	support.ch@trekstor.de	German
DE	01805 - TREKSTOR*		
	01805 - 87 35 78 67*	support.de@trekstor.de	German
ES	+49 431 - 24 89 45 76**	support.es@trekstor.de	Spanish
FR	+49 431 - 24 89 45 74**	support.fr@trekstor.de	French
HU	+49 431 - 24 89 45 79**	support.en@trekstor.de	English
IT	+49 431 - 24 89 45 75**	support.it@trekstor.de	Italian
LU	+49 431 - 24 89 45 72**	support.lu@trekstor.de	German, French
NL	+49 431 - 24 89 45 81**	support.en@trekstor.de	English
PL	+49 431 - 24 89 45 77**	support.pl@trekstor.de	Polish
PT	+49 431 - 24 89 45 78**	support.en@trekstor.de	English
UK	+49 431 - 24 89 45 71**	support.en@trekstor.de	English

* 12 Cent/Min. aus dem deutschen Festnetz der DTAG
** Please check with your local telephone provider for connection costs.

TrekStor GmbH & Co. KG
Kastanienallee 8-10 · D-64653 Lorsch · Germany · www.trekstor.de